

Thank you for using our products.

**INSTALLATION INSTRUCTIONS
 CLASS A/B SPLITTER
 (FOR SP40/2 AND SPB-160/SPB-80/4)**

Use this product according to this instruction manual. Please keep this instruction manual for future reference.


MODEL NUMBER:

109900 SP4Z-A/B

GENERAL:

The Class A/B Splitter (SP4Z-A/B) is designed to be used with Wheelock's SP40/2 SAFEPATH4 panel and the SAFEPATH4 Audio Booster (SPB-160 and SPB-80/4) panels. The SP4Z-A/B provides a means for expanding one supervised audio output zone to four Class B or two Class A zones. **The SP4Z-A/B is UL Listed under Standard 864**, Control Units for Fire Protective Signaling Systems. They are for indoor use only.

One SP4Z-A/B can be connected to the SP40/2 panel. It is to be mounted inside the panel enclosure onto the backplane in the upper right hand corner. Two SP4Z-A/B's can be connected to the SPB-160. One SP4Z-A/B can be connected to the SPB-80/4. It is to be mounted inside the SPB-160 or SPB-80/4 panel on the Splitter Mounting Bracket (SPMB-4Z - purchased separately) mounted over the 24VDC Power Supply (SAPS). The SP4Z-A/B has a maximum power output per zone that cannot exceed what is listed in Table 1.

NOTE: All **CAUTIONS** and **WARNINGS** are identified by the symbol . All warnings are printed in bold capital letters.

WARNING: PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT. FAILURE TO COMPLY WITH ANY OF THE FOLLOWING INSTRUCTIONS, CAUTIONS AND WARNINGS COULD RESULT IN IMPROPER APPLICATION, INSTALLATION AND/OR OPERATION OF THESE PRODUCTS IN AN EMERGENCY SITUATION, WHICH COULD RESULT IN PROPERTY DAMAGE AND SERIOUS INJURY OR DEATH TO YOU AND/OR OTHERS.

SPECIFICATIONS:

Class A	Operating Voltage	25.0V	70.7V
	Maximum Output Power Per Zone	40.0W	40.0W
	Audio Output Voltage	24VDC	
	Standby/Alarm Current at 24VDC	15mA	
Class B	Maximum Output Power Per Zone	20W	20W

WIRING INSTRUCTIONS:

NOTE: The terminal blocks on the SP4Z-A/B are removable. To remove a terminal block, pull the block straight up from the circuit board as shown in Figure 1. Attach wires to the desired connections, then plug the terminal block back on the board being careful to match and align the pins.

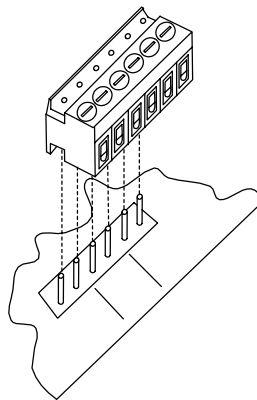


Figure 1.

MOUNTING INSTRUCTIONS: (SP40/2)

Figure 2 shows the mounting location of the SP4Z-A/B Splitter to the backplane of the SP40/2 panel. Figure 3 shows the correct mounting procedure.

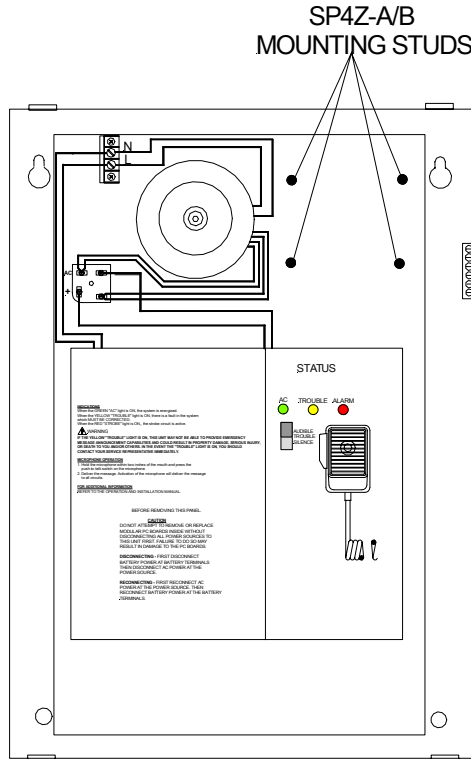


Figure 2.

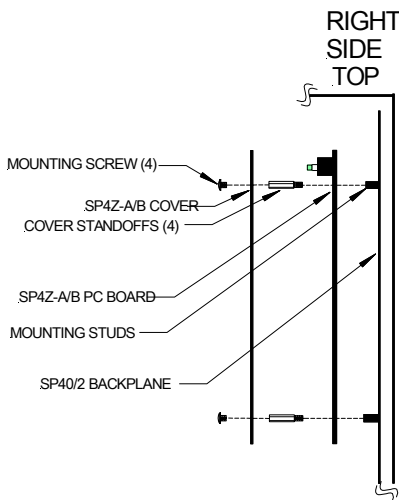


Figure 3.

1. Position the SP4Z-A/B PC board with the terminal blocks pointing to the top of the SP40/2 enclosure and align the mounting holes on the PC board with the mounting studs.
2. Screw the male end of the 4 cover standoffs through the SP4Z-A/B PC board and to the 4 mounting studs on the SP40/2 backplane. Tighten standoffs snug.
3. Attach wiring in accordance with the wiring section of this installation instruction.
4. Align the SP4Z-A/B cover with the holes in the cover standoffs and mount the cover using the 4 mounting screws. Tighten the screws hand tight.

MOUNTING INSTRUCTIONS: (SPB-160 and SPB-80/4)

Figure 4 shows the mounting location of the SP4Z-A/B Splitter to the Splitter Mounting Bracket (SPMB-4Z - purchased separately). Figure 5 shows the correct mounting procedure.

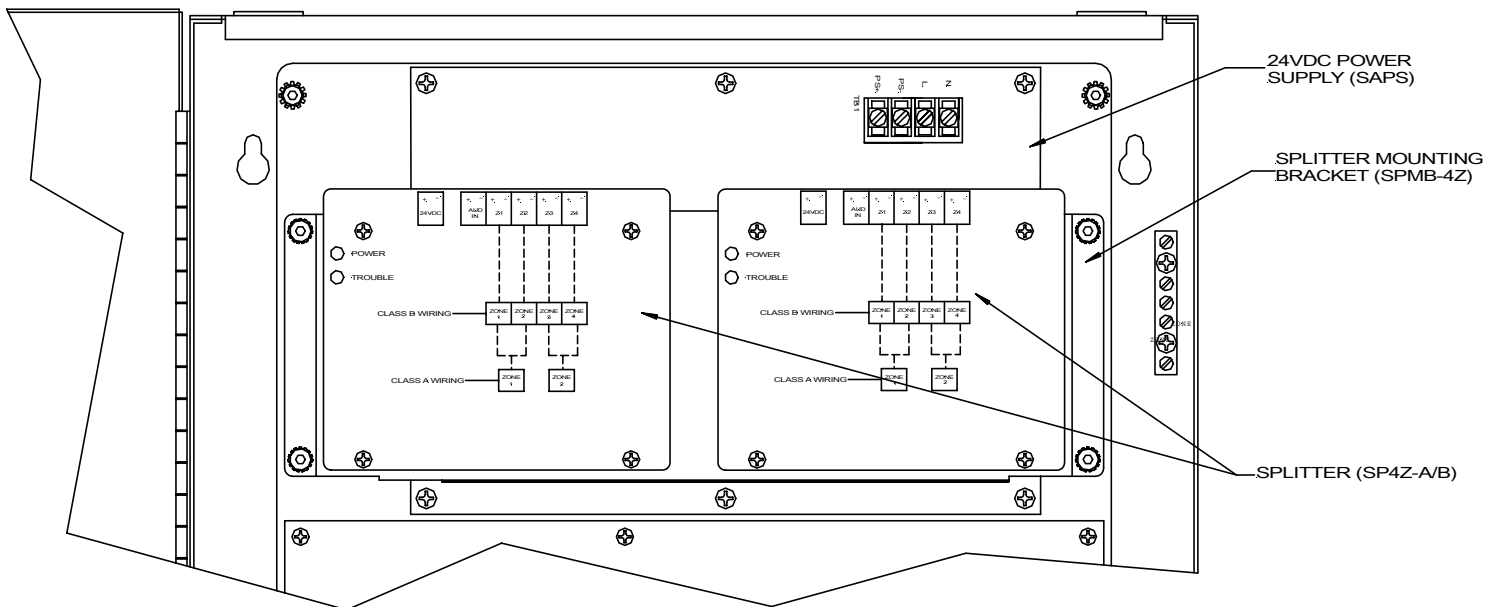


Figure 4.

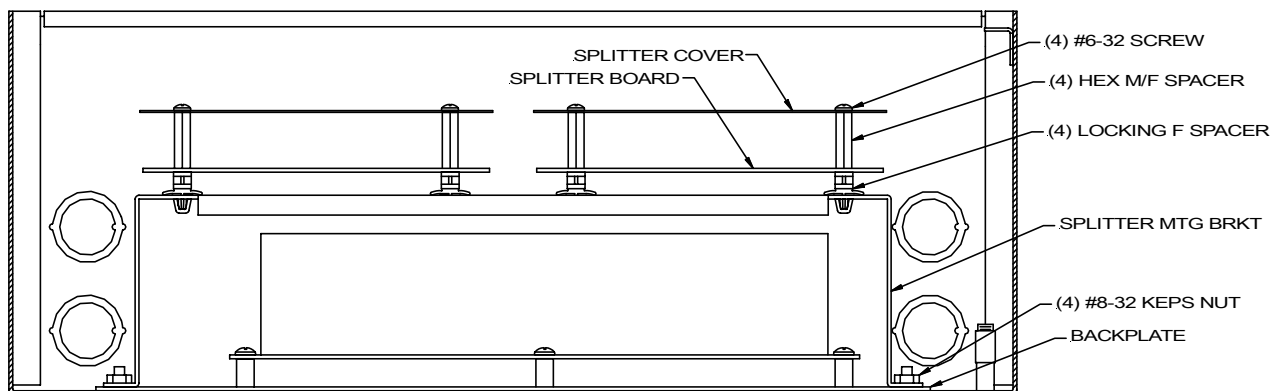


Figure 5.

1. Mount the Splitter Mounting Bracket (SPMB-4Z) to the SPB-160 or SPB-80/4 according to installation instructions (P84252).
2. Install the 4 nylon Locking Female Spacers to the mounting bracket by pushing them into place.
3. Position the SP4Z-A/B PC board with the terminal blocks pointing to the top of the Audio Booster enclosure and align the mounting holes on the PC board with the mounting studs.
4. Screw the male end of the 4 Hex M/F Spacers through the SP4Z-A/B PC board and to the 4 Locking Female Spacers on the SPMB-4Z. Tighten standoffs snug plus $\frac{1}{4}$ turn.
5. Attach wiring in accordance with the wiring section of this installation instruction.
6. Align the SP4Z-A/B Cover with the holes in the cover spacers and mount the cover using the 4 mounting screws. Tighten the screws hand tight.
7. Repeat Steps 2 through 6 when installing second splitter in the SPB-160 Audio Booster.

NOTE: One SPMB-4Z mounting bracket can support two SP4Z-A/B splitters.

WIRING INSTRUCTIONS:

⚠ WARNING: SHUT OFF ALL POWER BEFORE STARTING THE INSTALLATION. ELECTRICAL SHOCK CAN CAUSE DEATH OR SERIOUS INJURY.

⚠ CAUTION: Do not move jumpers while the unit is powered on. Doing so may damage the Splitter.

Jumper Plugs J1 and J3 must be set for either Class A or Class B Wiring (Figures 6A and 6B).

NOTE: Factory setting is for Class B Wiring.

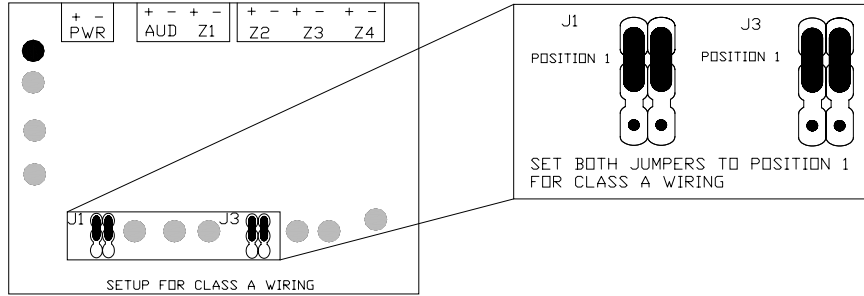


Figure 6A: Setup for Class A Wiring

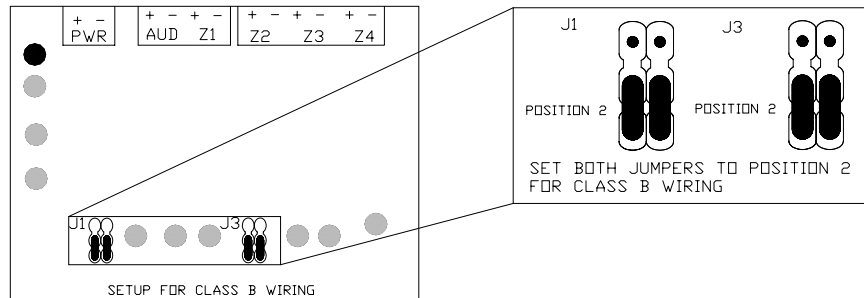


Figure 6B: Setup for Class B Wiring

1. See Figures 6C and 6D for wiring diagram.

NOTE: Unused zones must have a Listed 10K Ohm EOLR installed to prevent an open trouble condition.

NOTE: Cannot utilize Class A and Class B wiring on single splitter.

2. See Figure 8 or the Splitter cover silkscreen for terminal block wiring designations.

CLASS A WIRING:

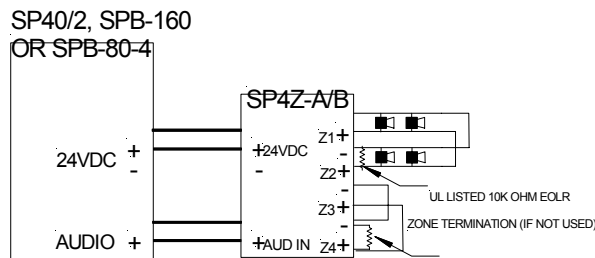


Figure 6C: Power Limited For Supervised Class A Wiring.

CLASS B WIRING:

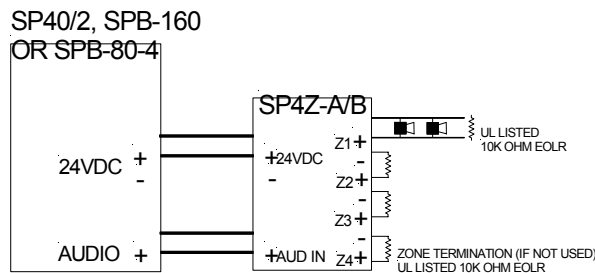


Figure 6D: Power Limited For Supervised Class B Wiring.

⚠ WARNING: SHUT OFF ALL POWER BEFORE STARTING THE INSTALLATION. ELECTRICAL SHOCK CAN CAUSE DEATH OR SERIOUS INJURY.

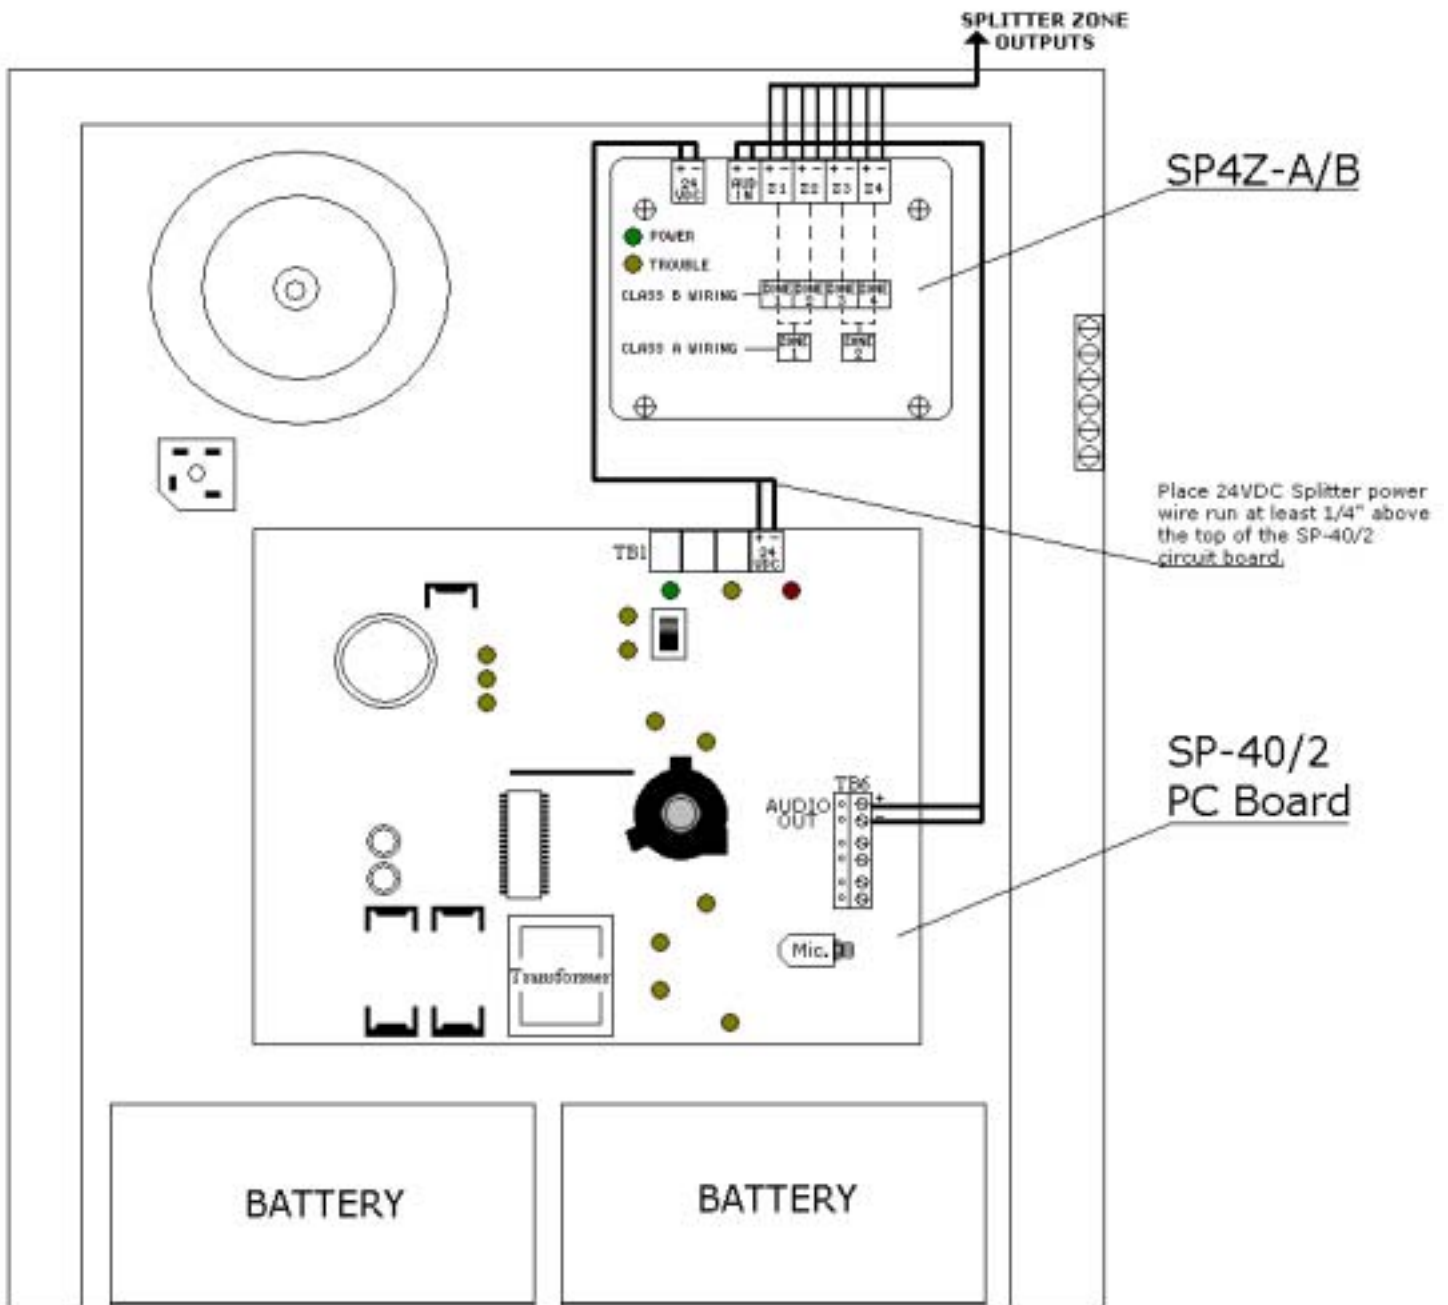


Figure 7A:

⚠ WARNING: SHUT OFF ALL POWER BEFORE STARTING THE INSTALLATION. ELECTRICAL SHOCK CAN CAUSE DEATH OR SERIOUS INJURY.

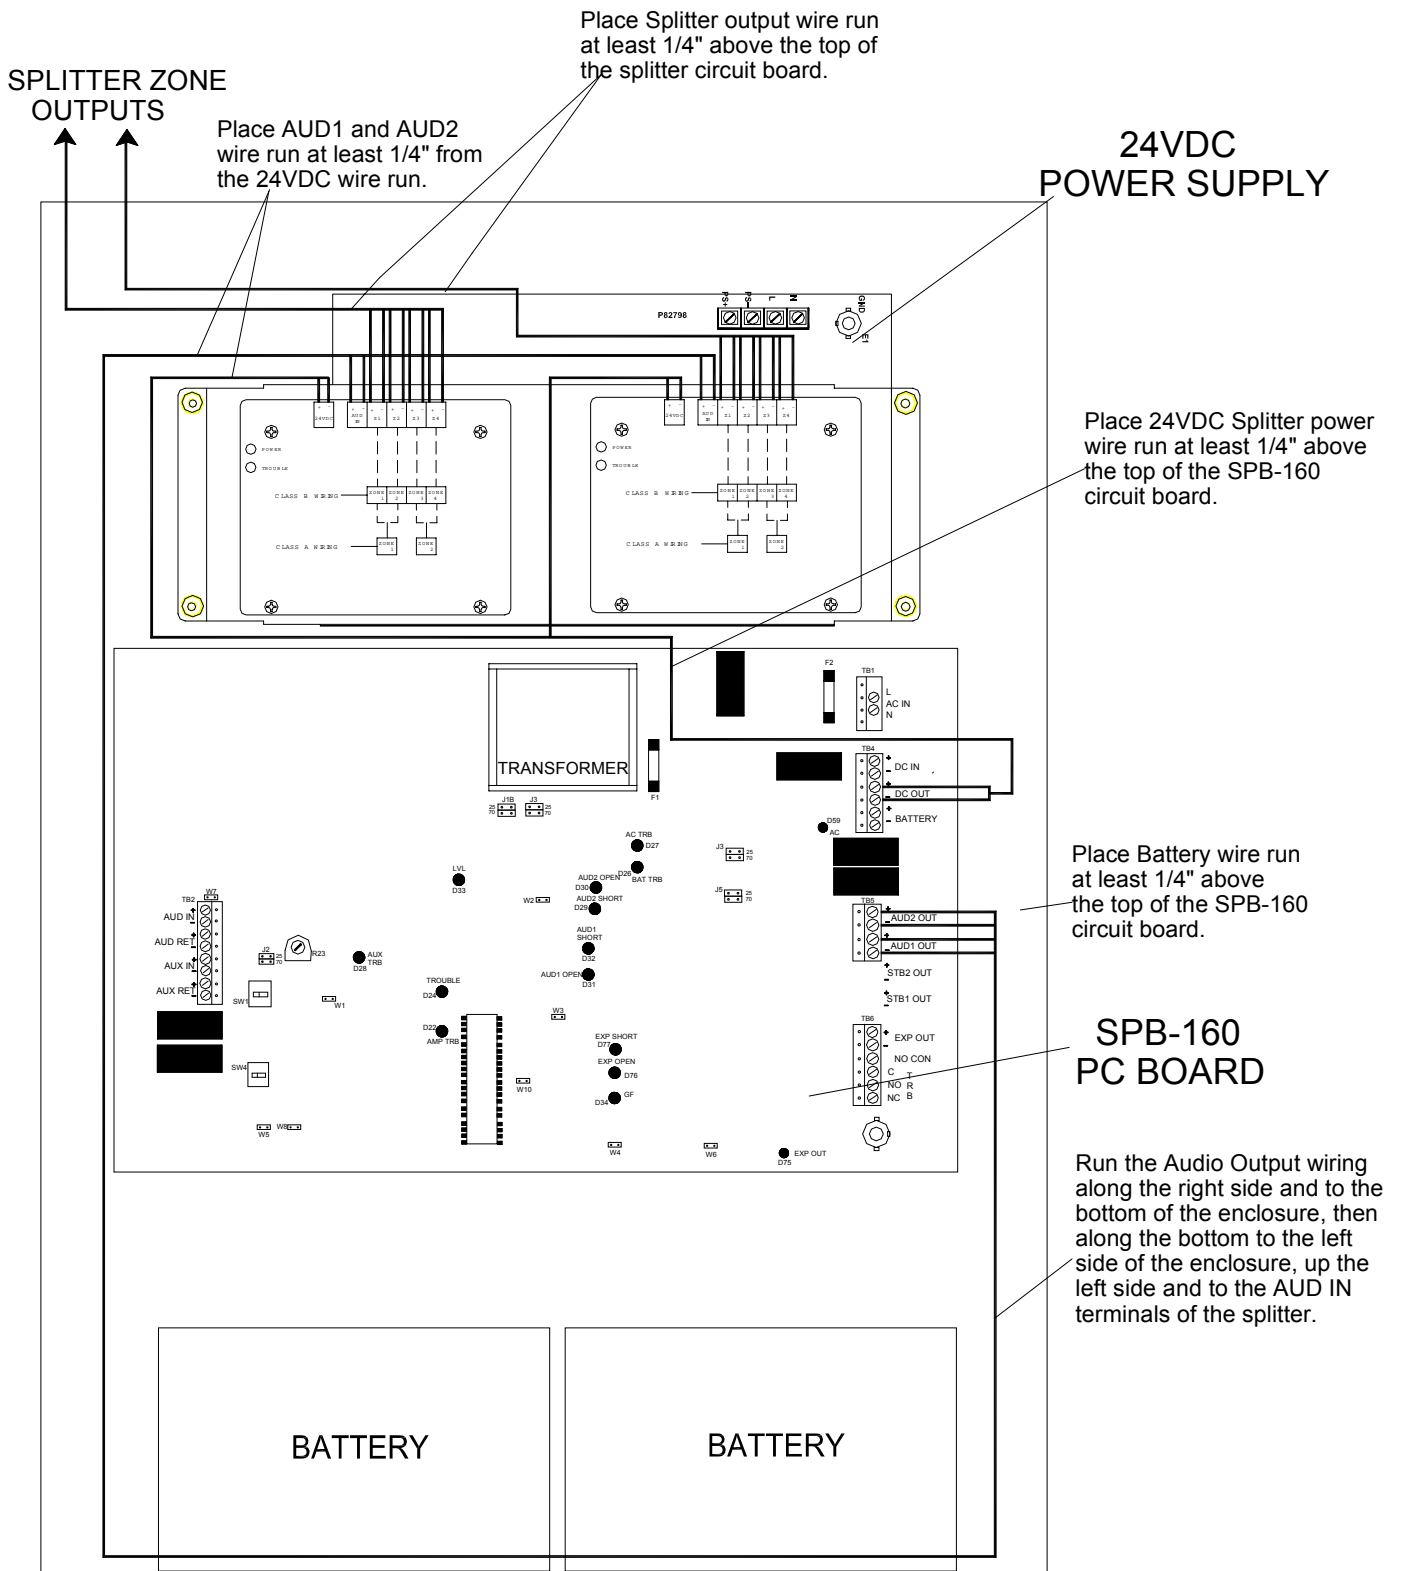


Figure 7B:
Figure 7B shows the wiring routes for wiring the SPB-160 to the AUD1 and AUD2 Splitters.

⚠ WARNING: SHUT OFF ALL POWER BEFORE STARTING THE INSTALLATION. ELECTRICAL SHOCK CAN CAUSE DEATH OR SERIOUS INJURY.

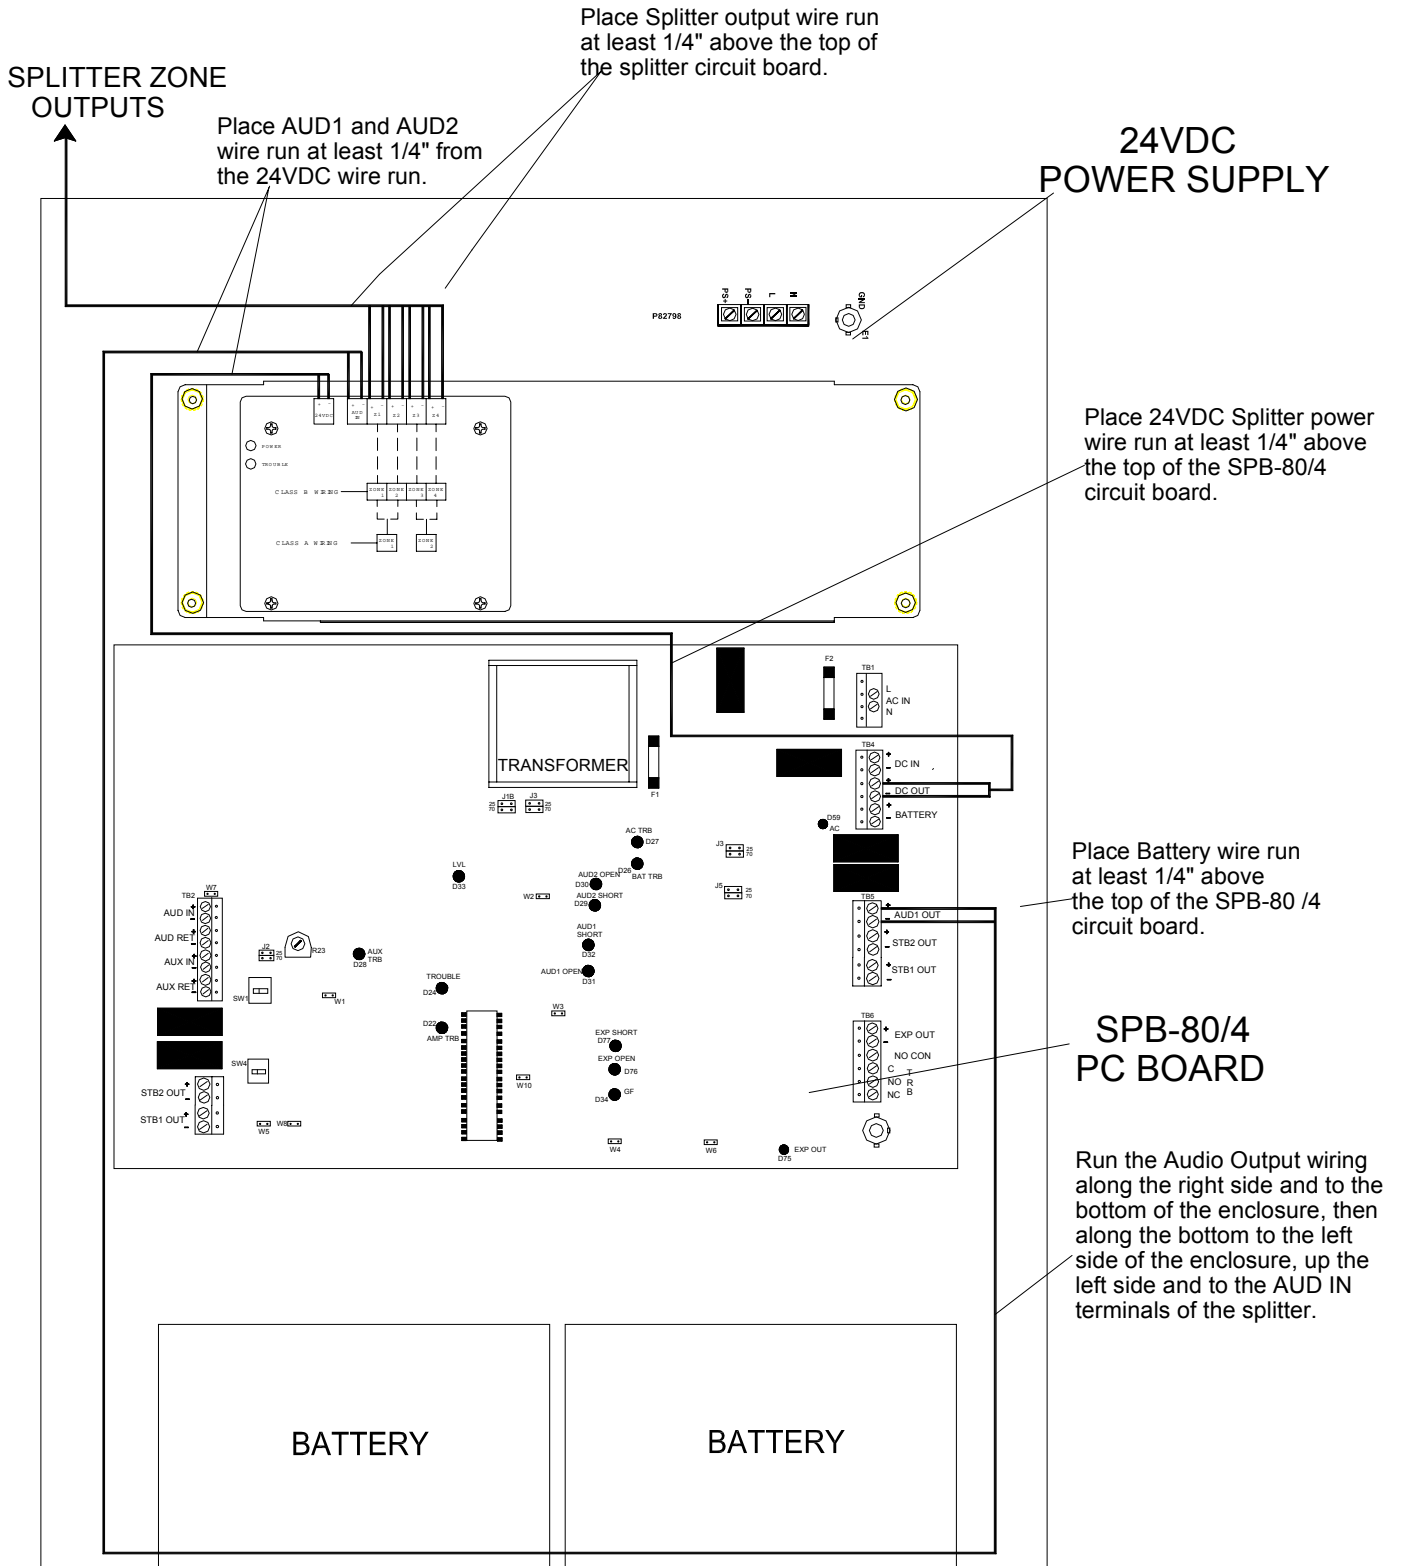


Figure 7C:
Figure 7C shows the wiring routes for wiring the SPB-80/4 to the AUD1 Splitter.

WIRING SPECIFICATIONS:

Cable Size: Accepts #12 - #18 American Wire Gauge (AWG) for single wire connection or #16 - #18 AWG for double wire connections.

OPERATING INSTRUCTIONS:

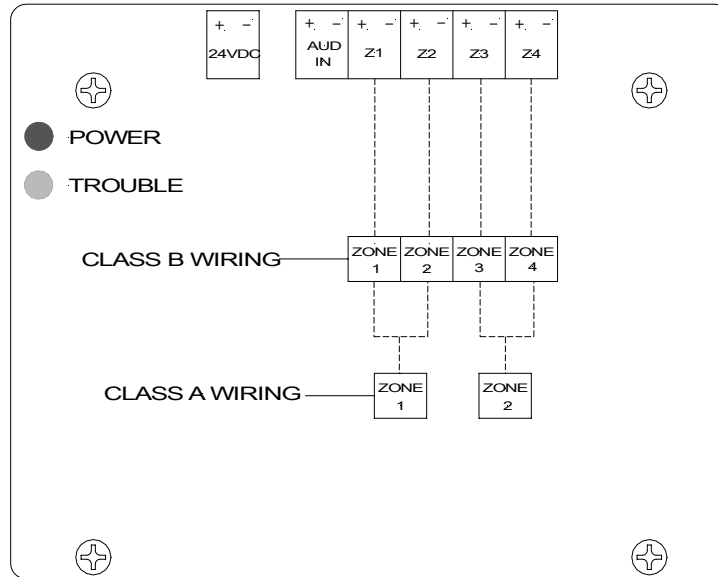


Figure 8.

TROUBLESHOOTING PROCEDURES:

Figure 9 Power and trouble LED's on the SP4Z-A/B Splitter PC board.

1. Insure that the green POWER LED is "ON". If no LED's are lighted, check the 24VDC input power.
2. Verify wiring is correct.
3. Verify jumpers are correct.
4. If the yellow TROUBLE LED is "ON" an output circuit supervision trouble is indicated. Remove the SP4Z-A/B cover and observe the 8 yellow LED's as shown in Figure 9 to determine the reason for the trouble.
5. For each SHORT LED "ON", check the speaker output wiring for that zone for a short or a faulty speaker appliance.
6. For each OPEN LED "ON", check the speaker wire run for that zone for an open or that the end of line resistor is missing. With the zone wiring removed from the SP4Z-A/B, a resistance reading on the zone will indicate the 10K Ohm EOLR and the wire resistance if the circuit is correct.
7. If a zone output does not operate and the green POWER LED is "ON" while the yellow TROUBLE LED is "OFF", the SP4Z-A/B splitter has malfunctioned. Replace.

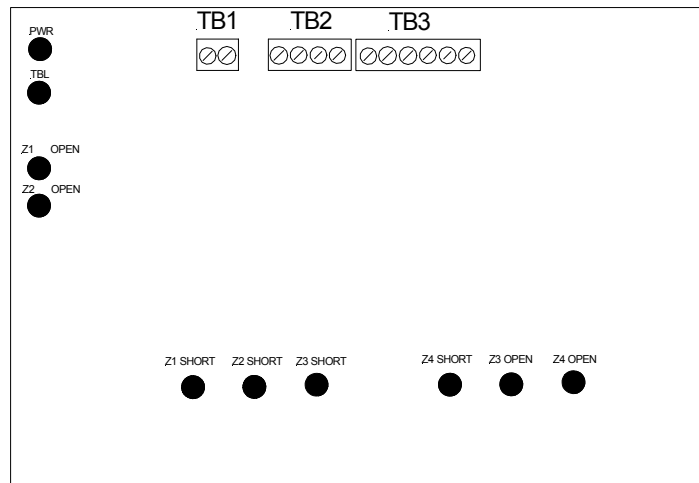


Figure 9.

ANY MATERIAL EXTRAPOLATED FROM THIS DOCUMENT OR FROM WHEELOCK MANUALS OR OTHER DOCUMENTS DESCRIBING THE PRODUCT FOR USE IN PROMOTIONAL OR ADVERTISING CLAIMS, OR FOR ANY OTHER USE, INCLUDING DESCRIPTION OF THE PRODUCT'S APPLICATION, OPERATION, INSTALLATION AND TESTING IS USED AT THE SOLE RISK OF THE USER AND WHEELOCK WILL NOT HAVE ANY LIABILITY FOR SUCH USE.

Limited Warranty

Wheelock products must be used within their published specifications and must be PROPERLY specified, applied, installed, operated, maintained and operationally tested in accordance with these instructions at the time of installation and at least twice a year or more often and in accordance with local, state and federal codes, regulations and laws. Specification, application, installation, operation, maintenance and testing must be performed by qualified personnel for proper operation in accordance with all of the latest National Fire Protection Association (NFPA), Underwriters' Laboratories (UL), Underwriters' Laboratories of Canada (ULC), National Electrical Code (NEC), Occupational Safety and Health Administration (OSHA), local, state, county, province, district, federal and other applicable building and fire standards, guidelines, regulations, laws and codes including, but not limited to, all appendices and amendments and the requirements of the local authority having jurisdiction (AHJ). Wheelock products when properly specified, applied, installed, operated, maintained and operationally tested as provided above are warranted against mechanical and electrical defects for a period of three years from date of manufacture (as determined by date code). Correction of defects by repair or replacement shall be at Wheelock's sole discretion and shall constitute fulfillment of all obligations under this warranty. THE FOREGOING LIMITED WARRANTY SHALL IMMEDIATELY TERMINATE IN THE EVENT ANY PART NOT FURNISHED BY WHEELOCK IS INSTALLED IN THE PRODUCT. THE FOREGOING LIMITED WARRANTY SPECIFICALLY EXCLUDES ANY SOFTWARE REQUIRED FOR THE OPERATION OF OR INCLUDED IN A PRODUCT. WHEELOCK MAKES NO REPRESENTATION OR WARRANTY OF ANY OTHER KIND, EXPRESS, IMPLIED OR STATUTORY WHETHER AS TO MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR ANY OTHER MATTER.

USERS ARE SOLELY RESPONSIBLE FOR DETERMINING WHETHER A PRODUCT IS SUITABLE FOR THE USER'S PURPOSES, OR WHETHER IT WILL ACHIEVE THE USER'S INTENDED RESULTS. THERE IS NO WARRANTY AGAINST DAMAGE RESULTING FROM MISAPPLICATION, IMPROPER SPECIFICATION, ABUSE, ACCIDENT OR OTHER OPERATING CONDITIONS BEYOND WHEELOCK'S CONTROL.

SOME WHEELOCK PRODUCTS CONTAIN SOFTWARE. WITH RESPECT TO THOSE PRODUCTS, WHEELOCK DOES NOT WARRANTY THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE OR THAT THE SOFTWARE WILL MEET ANY OTHER STANDARD OF PERFORMANCE, OR THAT THE FUNCTIONS OR PERFORMANCE OF THE SOFTWARE WILL MEET THE USER'S REQUIREMENTS. WHEELOCK SHALL NOT BE LIABLE FOR ANY DELAYS, BREAKDOWNS, INTERRUPTIONS, LOSS, DESTRUCTION, ALTERATION, OR OTHER PROBLEMS IN THE USE OF A PRODUCT ARISING OUT OF OR CAUSED BY THE SOFTWARE.

THE LIABILITY OF WHEELOCK ARISING OUT OF THE SUPPLYING OF A PRODUCT, OR ITS USE, WHETHER ON WARRANTIES, NEGLIGENCE, OR OTHERWISE, SHALL NOT IN ANY CASE EXCEED THE COST OF CORRECTING DEFECTS AS STATED IN THE LIMITED WARRANTY AND UPON EXPIRATION OF THE WARRANTY PERIOD ALL SUCH LIABILITY SHALL TERMINATE. WHEELOCK IS NOT LIABLE FOR LABOR COSTS INCURRED IN REMOVAL, REINSTALLATION OR REPAIR OF THE PRODUCT BY ANYONE OTHER THAN WHEELOCK OR FOR DAMAGE OF ANY TYPE WHATSOEVER, INCLUDING BUT NOT LIMITED TO, LOSS OF PROFIT OR INCIDENTAL OR CONSEQUENTIAL DAMAGES. THE FOREGOING SHALL CONSTITUTE THE SOLE REMEDY OF THE PURCHASER AND THE EXCLUSIVE LIABILITY OF WHEELOCK.

IN NO CASE WILL WHEELOCK'S LIABILITY EXCEED THE PURCHASE PRICE PAID FOR A PRODUCT.

Limitation of Liability

WHEELOCK'S LIABILITY ON ANY CLAIM OF ANY KIND, INCLUDING NEGLIGENCE AND BREACH OF WARRANTY, FOR ANY LOSS OR DAMAGE RESULTING FROM, ARISING OUT OF, OR CONNECTED WITH THIS CONTRACT, OR FROM THE MANUFACTURE, SALE, DELIVERY, RESALE, REPAIR OR USE OF ANY PRODUCT COVERED BY THIS ORDER SHALL BE LIMITED TO THE PRICE APPLICABLE TO THE PRODUCT OR PART THEREOF WHICH GIVES RISE TO THE CLAIM. WHEELOCK'S LIABILITY ON ANY CLAIM OF ANY KIND SHALL CEASE IMMEDIATELY UPON THE INSTALLATION IN THE PRODUCT OF ANY PART NOT FURNISHED BY WHEELOCK. IN NO EVENT SHALL WHEELOCK BE LIABLE FOR ANY CLAIM OF ANY KIND UNLESS IT IS PROVEN THAT OUR PRODUCT WAS A DIRECT CAUSE OF SUCH CLAIM. FURTHER, IN NO EVENT, INCLUDING IN THE CASE OF A CLAIM OF NEGLIGENCE, SHALL WHEELOCK BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE PRECEDING LIMITATION MAY NOT APPLY TO ALL PURCHASERS.