


SYSTEM 6VP, QH16T Uam H16/RVP, H16/SVP

0180 - WIRING DIAGRAM

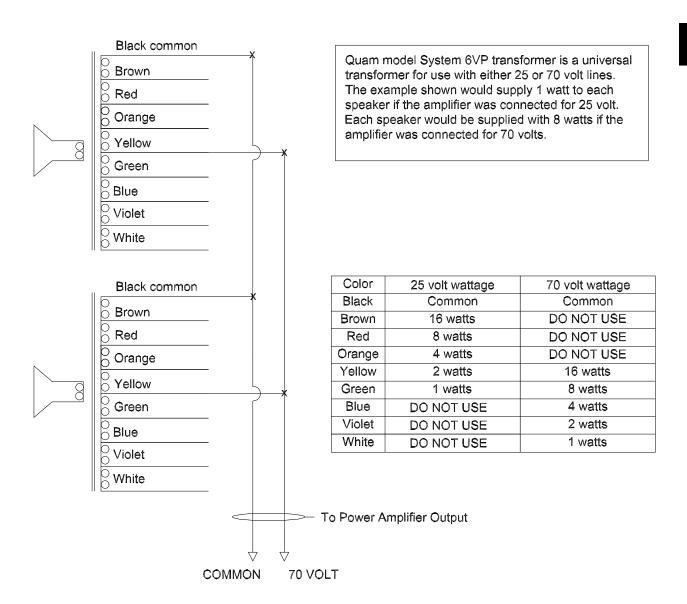

*Note:Each unused transformer tap must be insulated from each other and from ground.

Transformer color codes shown are for Quam System 6VP transformer.

Quam-Nichols Company

234 East Marquette Road, Chicago, IL 60637 Phone: (800) NEED NOW Fax: (888) NEED NOW (800) 633 - 3669 (888) 633 - 3669

E-Mail: neednow@qnc.com www.quamspeakers.com